
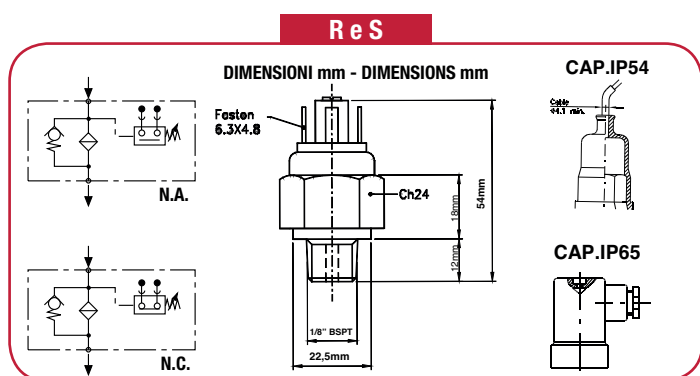


# INDICATORI INTASAMENTO (ASPIRAZIONE)



CLOGGING INDICATORS (SUCTION) - VERSCHMUTZUNGSANZEIGEN (SAUG) - INDICATEURS DE COLMAGE (ASPIRATION) - INDICADORES DE SUCIEDAD (ASPIRACION)

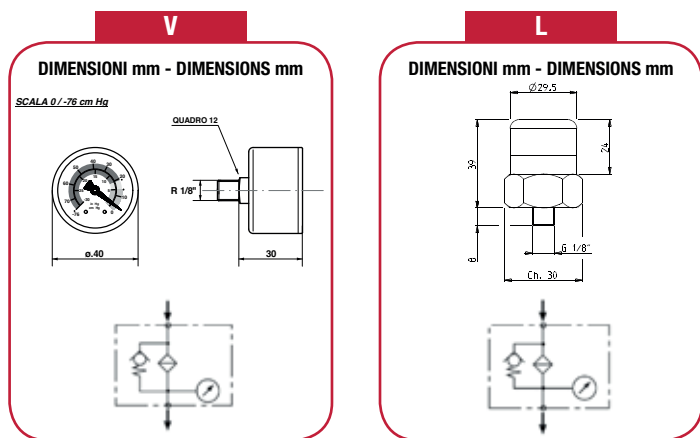

SERIE SERIES	TARATURA SETTING	TIPO - TYPE
<b>V</b>	0÷ -1 bar	Vuotometro Vacuum gauge Vakuummeter Vacuomètre Vuotometro
<b>L</b>	-0,15 bar	Vacuostato visivo Visual vacuum indicator Visuelle Vakuumschalter Vacuostat visuel Vacuostato visual
<b>R</b>	-0,2 bar	Vuotostato N.A. (Max 240V/0,4A) / (48V/0,5A) Vacuum switch N.O. (Max 240V/0,4A) / (48V/0,5A) Vakuumschalter N.O. (Max 240V/0,4A) / (48V/0,5A) Vacuostat N.O. (Max 240V/0,4A) / (48V/0,5A) Vacuostato N.A. (Max 240V/0,4A) / (48V/0,5A)
<b>S</b>	-0,2 bar	Vuotostato N.C. (Max 240V/0,4A) / (48V/0,5A) Vacuum switch N.C. (Max 240V/0,4A) / (48V/0,5A) Vakuumschalter N.C. (Max 240V/0,4A) / (48V/0,5A) Vacuostat N.F. (Max 240V/0,4A) / (48V/0,5A) Vacuostato N.A. (Max 240V/0,4A) / (48V/0,5A)

# INDICATORI INTASAMENTO (RITORNO)

CLOGGING INDICATORS (RETURN) - VERSCHMUTZUNGSANZEIGEN (RÜCKLAUF) - INDICATEURS DE COLMAGE (RETOUR) - INDICADORES DE SUCIEDAD (RETORNO)

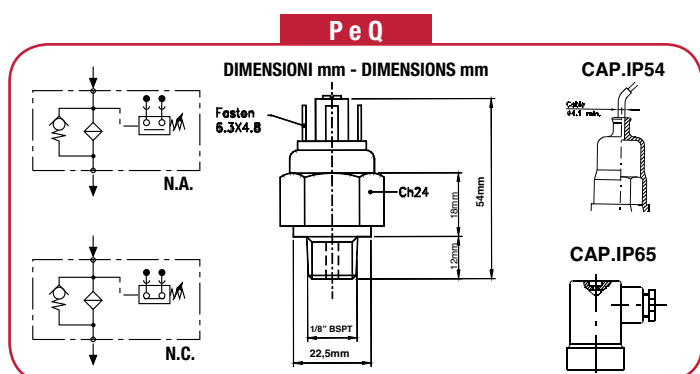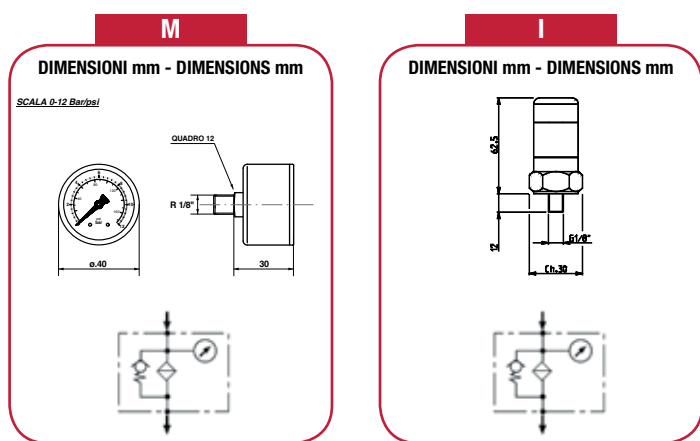

SERIE SERIES	TARATURA SETTING	TIPO - TYPE
<b>M</b>	0÷ 12 bar	Manometro Pressure gauge Manometer Manomètre Manometro
<b>I</b>	1,5 bar	Pressostato visivo Visual pressure indicator Optisch Differenzdruckanzeige Pressostat visuel Presostato visual
<b>P</b>	1,5 bar	Pressostato N.A. (Max 240V/0,4A) / (48V/0,5A) Pressure switch N.O. (Max 240V/0,4A) / (48V/0,5A) Druckschalter N.O. (Max 240V/0,4A) / (48V/0,5A) Pressostat N.O. (Max 240V/0,4A) / (48V/0,5A) Presostato N.A. (Max 240V/0,4A) / (48V/0,5A)
<b>Q</b>	1,5 bar	Pressostato N.C. (Max 240V/0,4A) / (48V/0,5A) Pressure switch N.C. (Max 240V/0,4A) / (48V/0,5A) Druckschalter N.C. (Max 240V/0,4A) / (48V/0,5A) Pressostat N.F. (Max 240V/0,4A) / (48V/0,5A) Presostato N.C. (Max 240V/0,4A) / (48V/0,5A)